



EEWH311B - Tire Changer

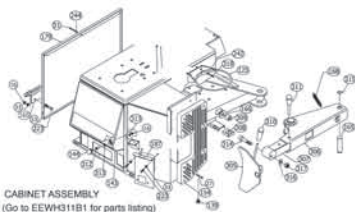


CABINET ASSEMBLY
(Go to EEW311B1 for parts listing)

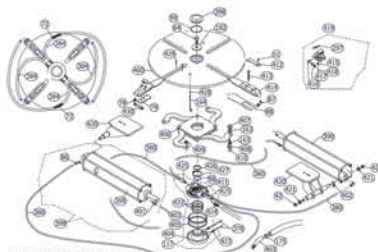


TURNTABLE ASSEMBLY
(Go to EEW311B2 for parts listing)




MOTOR & PULLEY
(Go to EEW311B7 for parts listing)

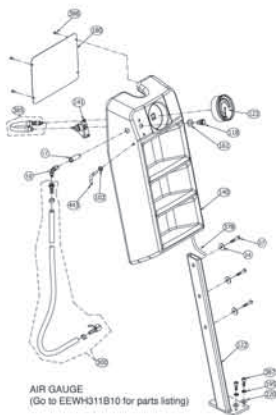


AIR GAUGE
(Go to EEW311B10 for parts listing)

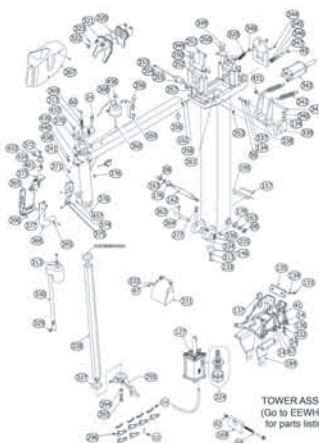


TOWER ASSEMBLY
(Go to EEW311B3 for parts listing)

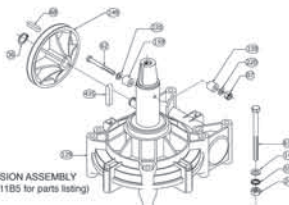


TRANSMISSION ASSEMBLY
(Go to EEW311B5 for parts listing)

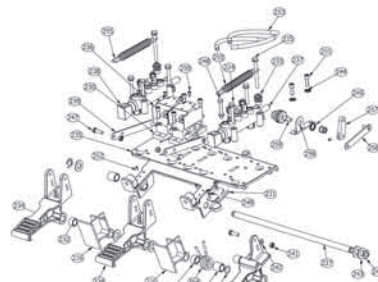

PEDAL VALVE ASSEMBLY
(Go to EEW311B4 for parts listing)

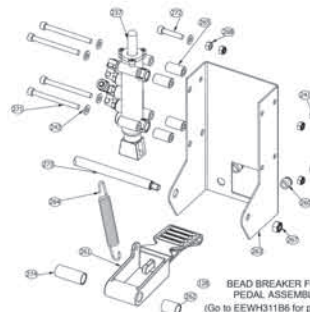


**BEAD BREAKER FOOT
PEDAL ASSEMBLY**
(Go to EEW311B6 for parts listing)

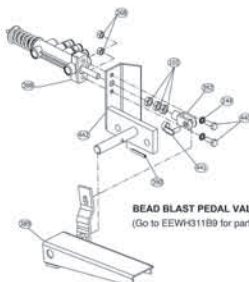


BEAD BLAST PEDAL VALVE ASSEMBLY
(Go to EEW311B9 for parts listing)


EAZ0033G85A

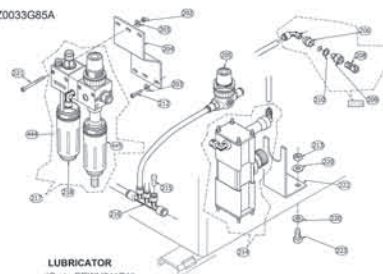

LUBRICATOR
(Go to EEW311B11 for parts listing)

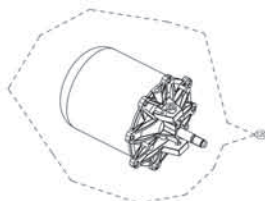

BEAD BREAKER CYLINDER
(Go to EEW311B13 for parts listing)

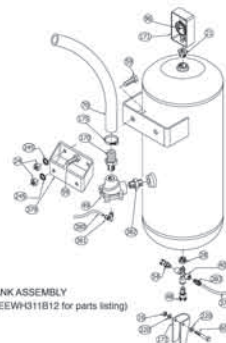

AIR TANK ASSEMBLY
(Go to EEW311B12 for parts listing)

EEWH311B TIRE CHANGER




Read instructions before use.

(Con't on page 2)
Brand Marketing, Kenosha, WI


EEWH311B - Tire Changer

Key	Stock Number	Description	Optional:	Key	Stock Number	Description
—	EEEWH311B1	Cabinet Assembly	—	—	EAA0356G19A	LASER KIT (B) 4030849 (not shown)
—	EEEWH311B2	Turntable Assembly	—	—	EAS2141J27A	LASER MOUNT BRACKET (not shown)
—	EEEWH311B3	Tower Assembly	—	—	EAA0304G80A	+4" Offset Mount/Dismount Head (not shown)
—	EEEWH311B4	Pedal Valve Assembly	—	—	EAA0331G91A	+4" Adaptors (4 each, use with EAA0304G80A) (not shown)
—	EEEWH311B5	Transmission Assembly	—	—	EAA0304G32A	Light Truck Adaptors (4 each)
—	EEEWH311B6	Bead Breaker Assembly	—	—	EAA0329G53A	Motorcycle/ATV Adaptors 8" - 24" (4 ea)
—	EEEWH311B9	Bead Blast Pedal Assembly	—	—	ST4029337	Motorcycle Mount/Dismount Head
—	EEEWH311B10	Inflation Tower Assembly	—	—	EAA0247G20A	Composite Mount/Demount Head
—	EEEWH311B11	Lubricator Assembly	—	—	EAA0304G37A	Plastic Mount/Demount Head for rims with protruding spokes
—	EEEWH311B12	Air Tank Assembly	—	—	EAA0329G27A	Mounting Adaptor for Quick Change Device
—	EEEWH311B13	Bead Breaker Cylinder Assembly	—	—	ST4025966	Bead Depressing Roller, Installs on Mount/Dismount Head
—	EAA0247G02A	TIRE MOUNTING BAR (not shown)	—	—	ST4027645	Jaw Protector, Covers Jaw (4 each)
—	ST0002593	BELT, A28 (not shown)	—	—	EAA0247G04A	Protective Cover (For tire lever EAA0247G02A)
—	5-14126A	Paste Brush (not shown)	—	—	EAA0304G14A	Wave Tire Tool
—	8-03229A	Paste Bucket (not shown)	—	—	EAA0247G14A	Motorcycle Bead Breaker Blade
—	EAA0304G97A	Bead Roller Locator Pin (not shown)	—	—	EAA0304G15A	Protective Cover for Bead Breaker Shovel
—	EAA0329G34B	Pneumatic Bead Assist (not shown)	—	—	EAA0384G58A	Bead Breaker Support Pad Extension
—	EAA0332G30A	Bead Roller for PBA (not shown)	—	—	EAA0329G74A	Slip-on Bead Breaker Pad for Small Motorcycle tires
			—	—	EAA0304G50A	Bead Breaker Blade for Off-road Applications
			—	—	EAA0304G51A	Roller Board, Bead Breaker
			—	—	EAA0247G70A	Bead Clamp for Low Profile Tires
			—	—	EAA0304G72A	Safety Restraint Arm
			—	—	EAA0304G52A	Plastic Rim Protector, Clip-on Type (3 ea)
			—	—	EAA0328G91A	Adjustable bead breaker disc for PBA, for upper bead
			—	—	EAA0332G32A	Rod with tapered roller for PBA (35mm dia)

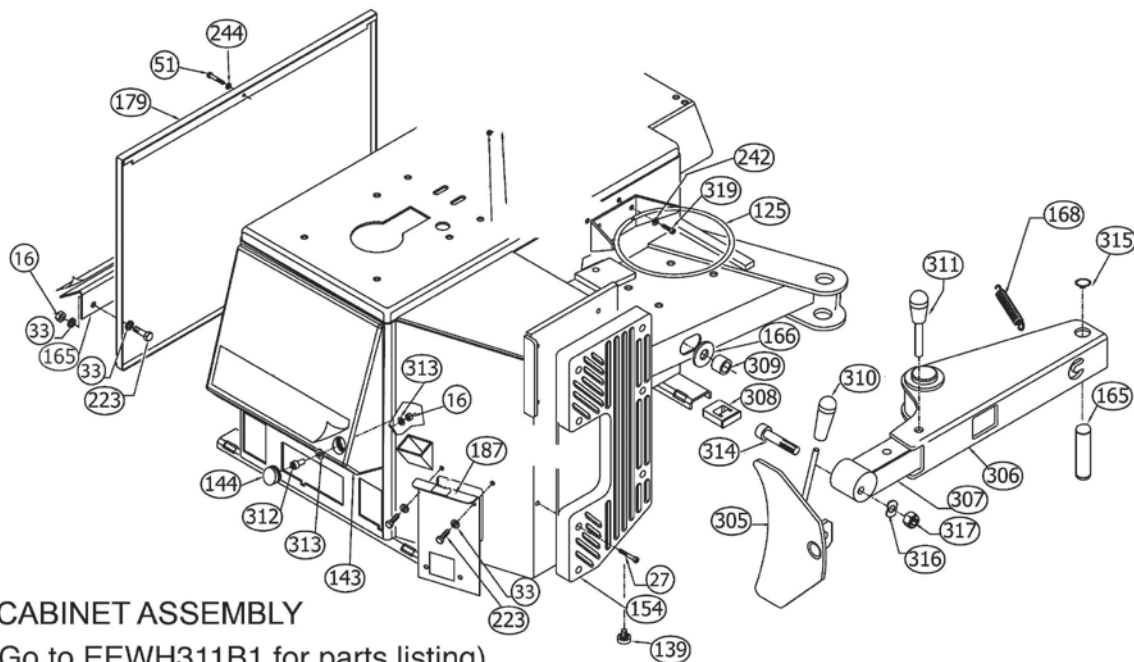


CABINET ASSEMBLY


(Go to EEWH311B1 for parts listing)

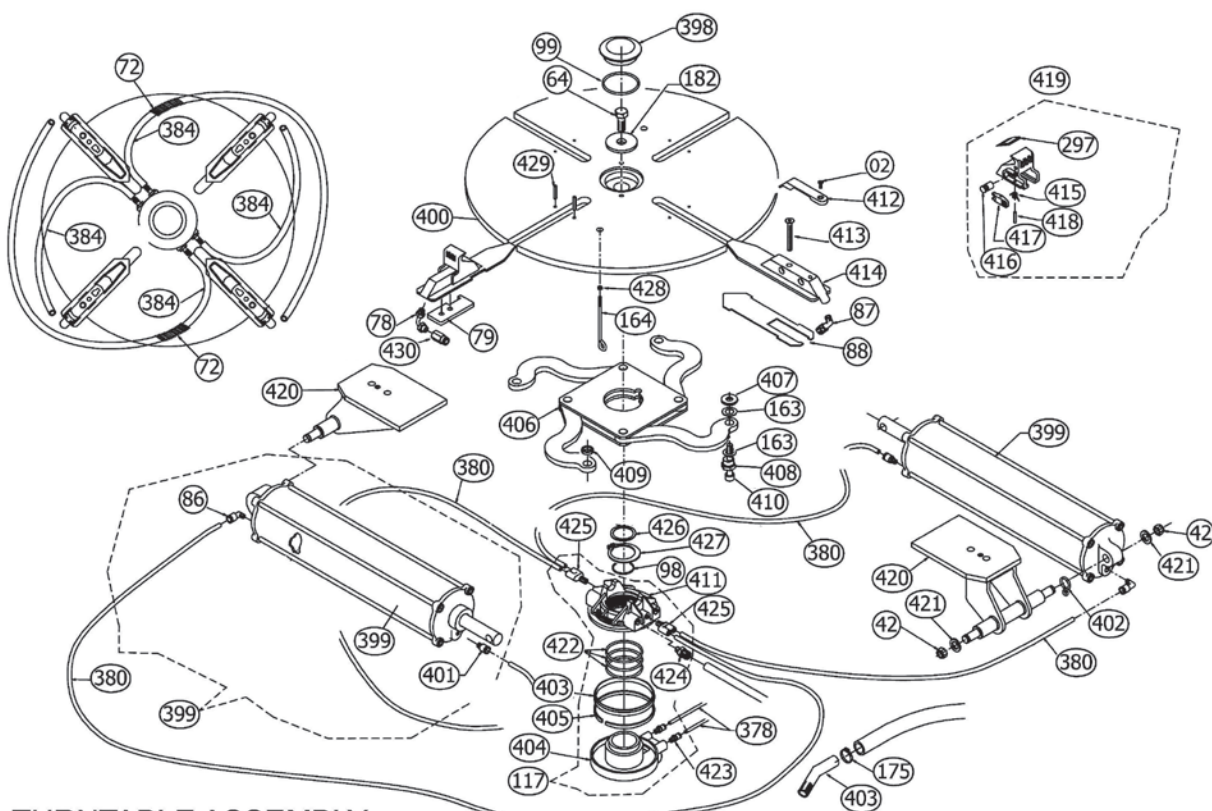

TURNTABLE ASSEMBLY


(Go to EEWH311B2 for parts listing)

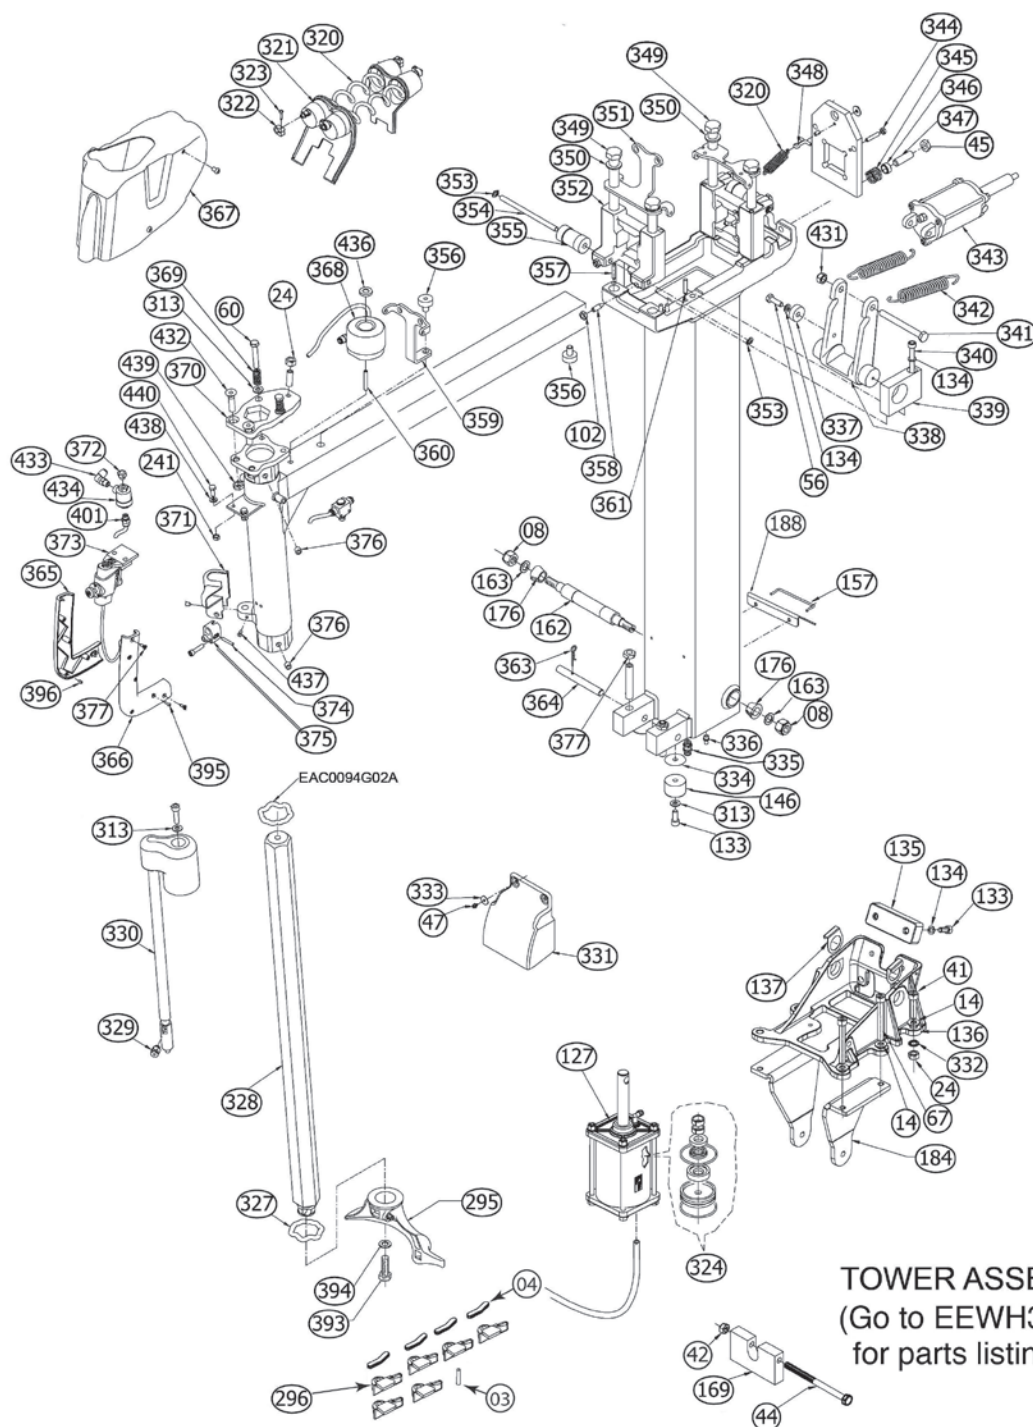

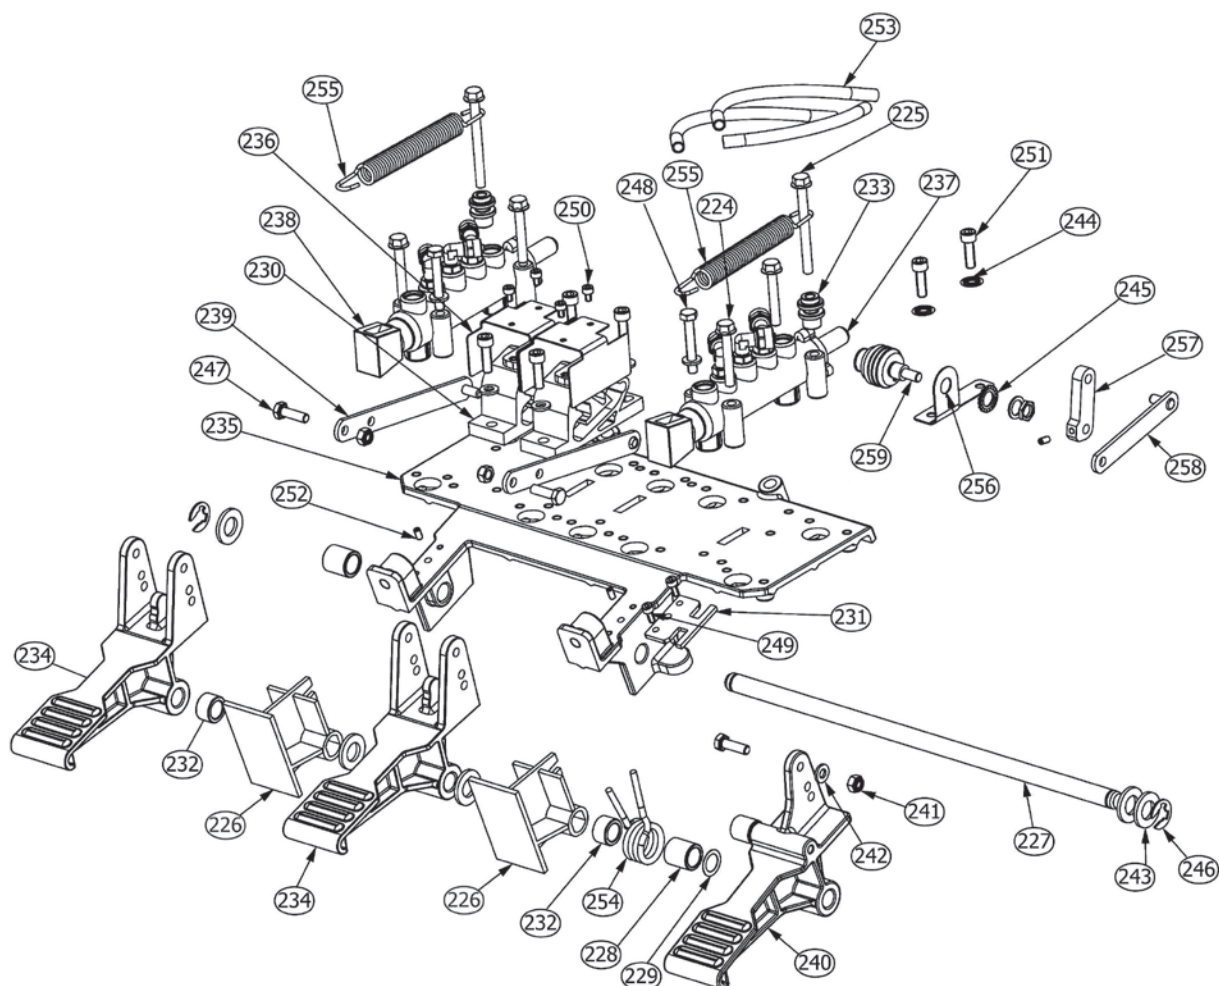


PEDAL VALVE ASSEMBLY

(Go to EEWH311B4 for parts listing)

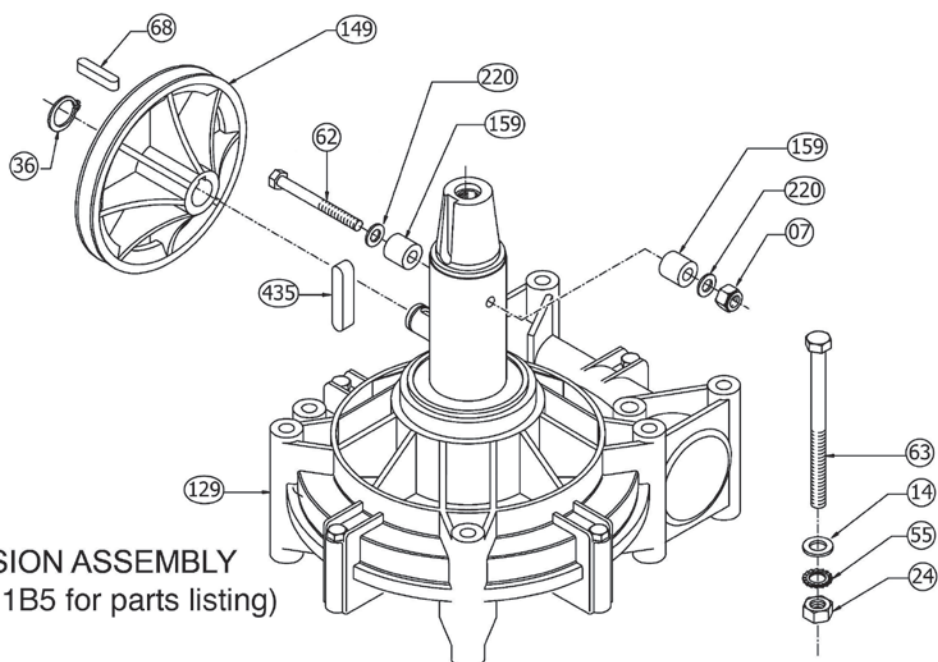


TRANSMISSION ASSEMBLY

(Go to EEWH311B5 for parts listing)

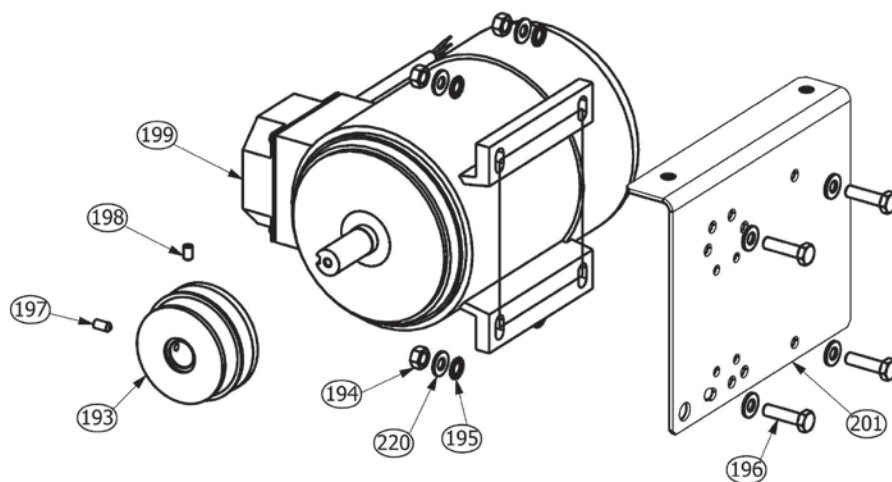


MOTOR & PULLEY


(Go to EEWH311B7 for parts listing)

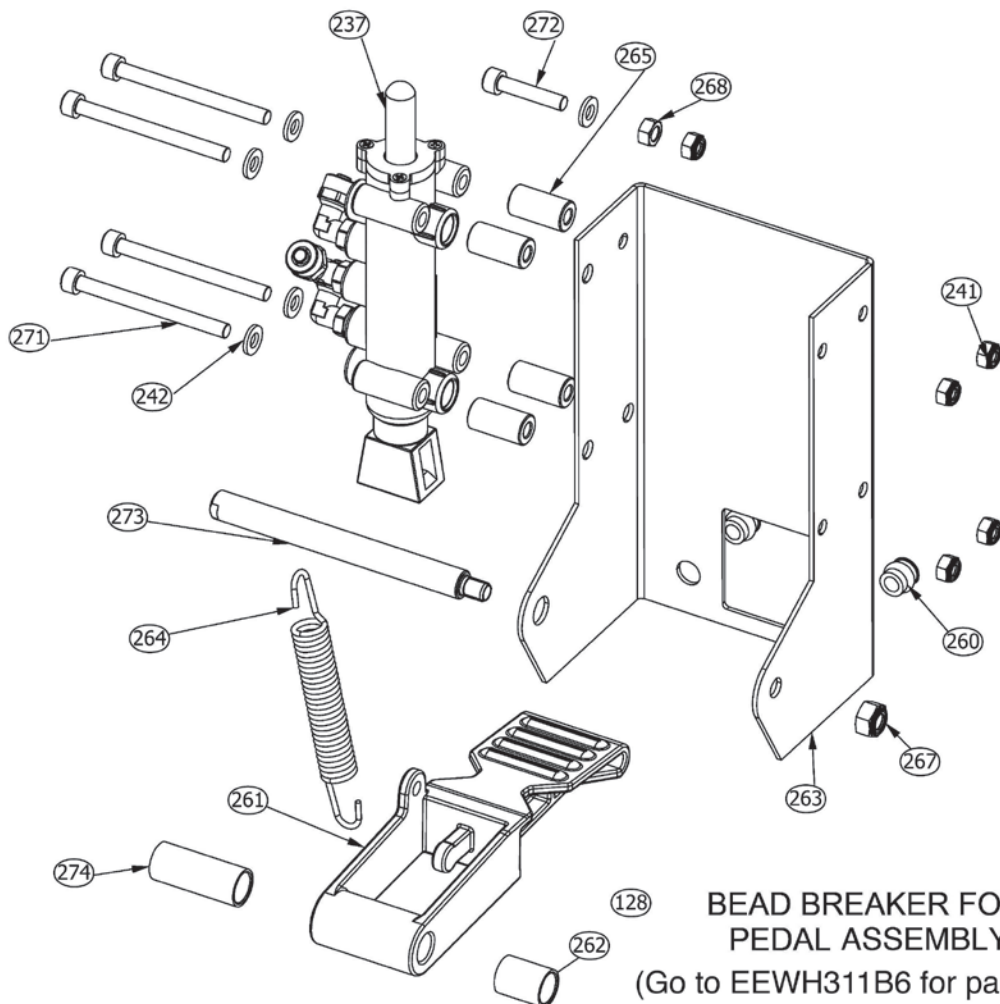

BEAD BREAKER FOOT PEDAL ASSEMBLY


(Go to EEWH311B6 for parts listing)

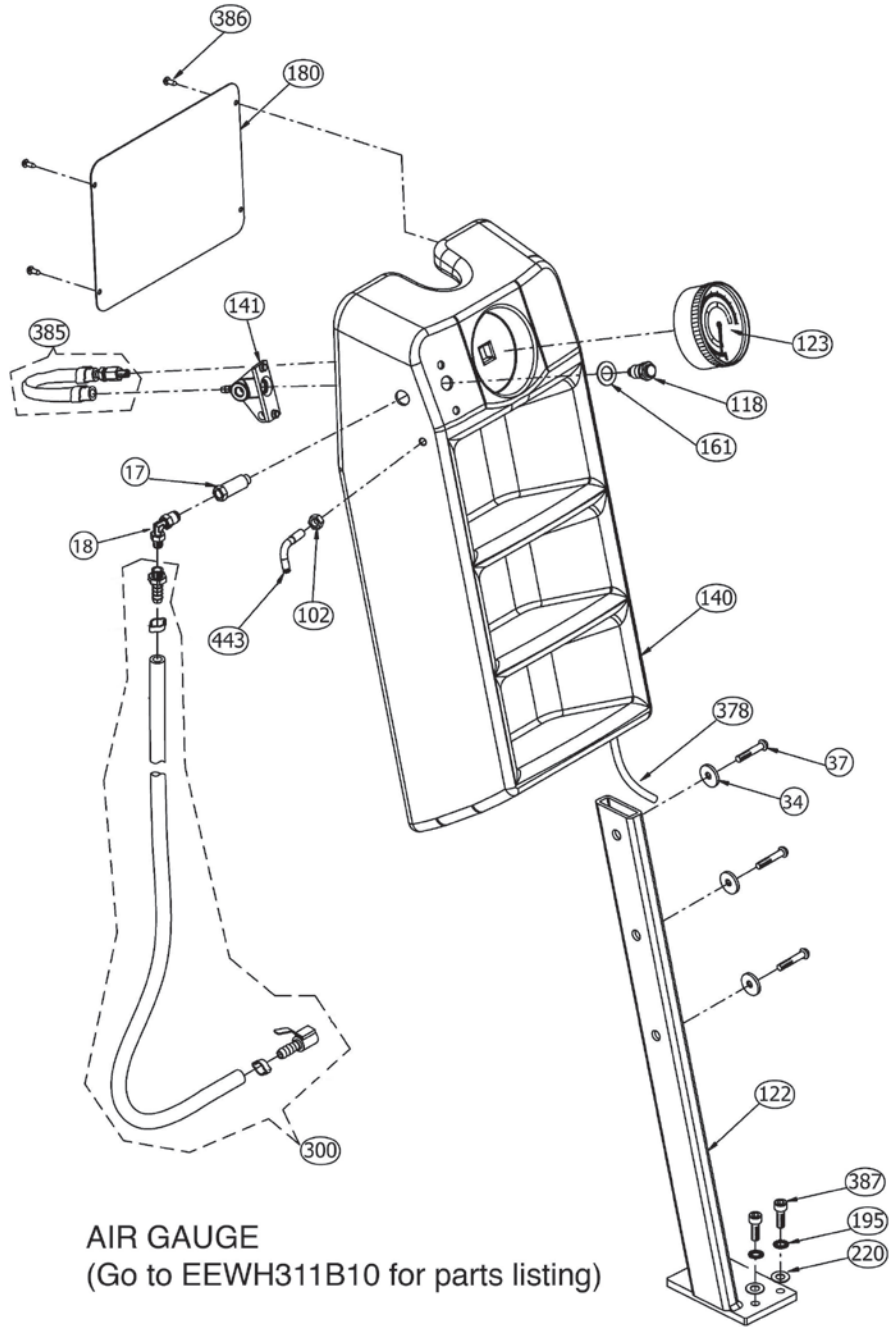

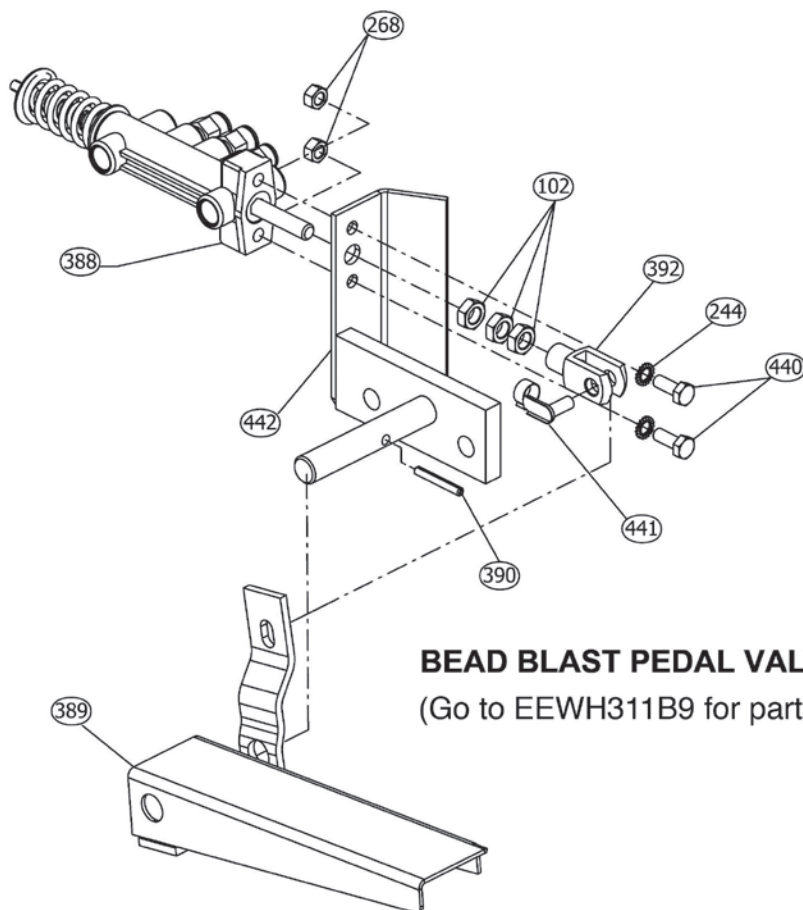

BEAD BLAST PEDAL VALVE ASSEMBLY


(Go to EEWH311B9 for parts listing)

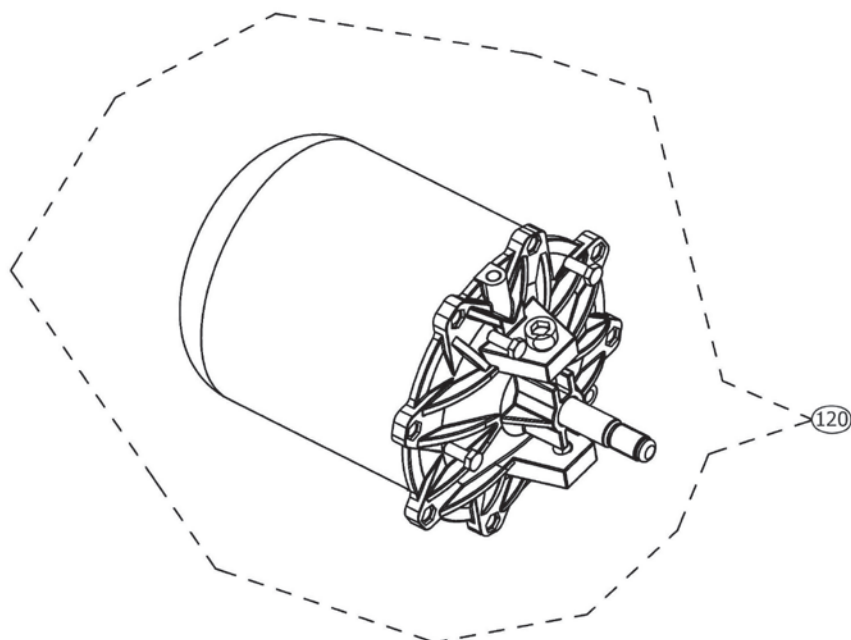


BEAD BREAKER CYLINDER

(Go to EEWH311B13 for parts listing)

EAZ0033G85A

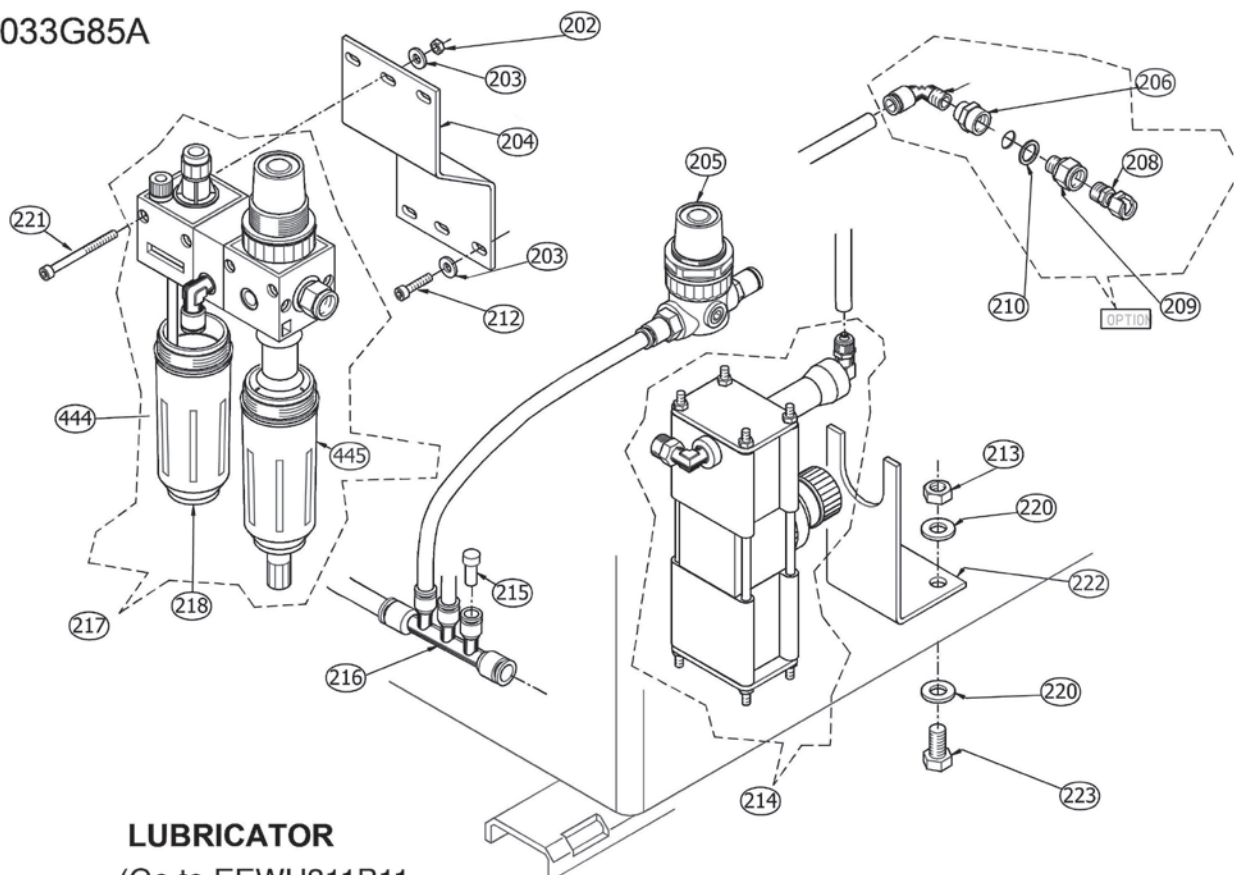**LUBRICATOR**

(Go to EEW311B11
for parts listing)

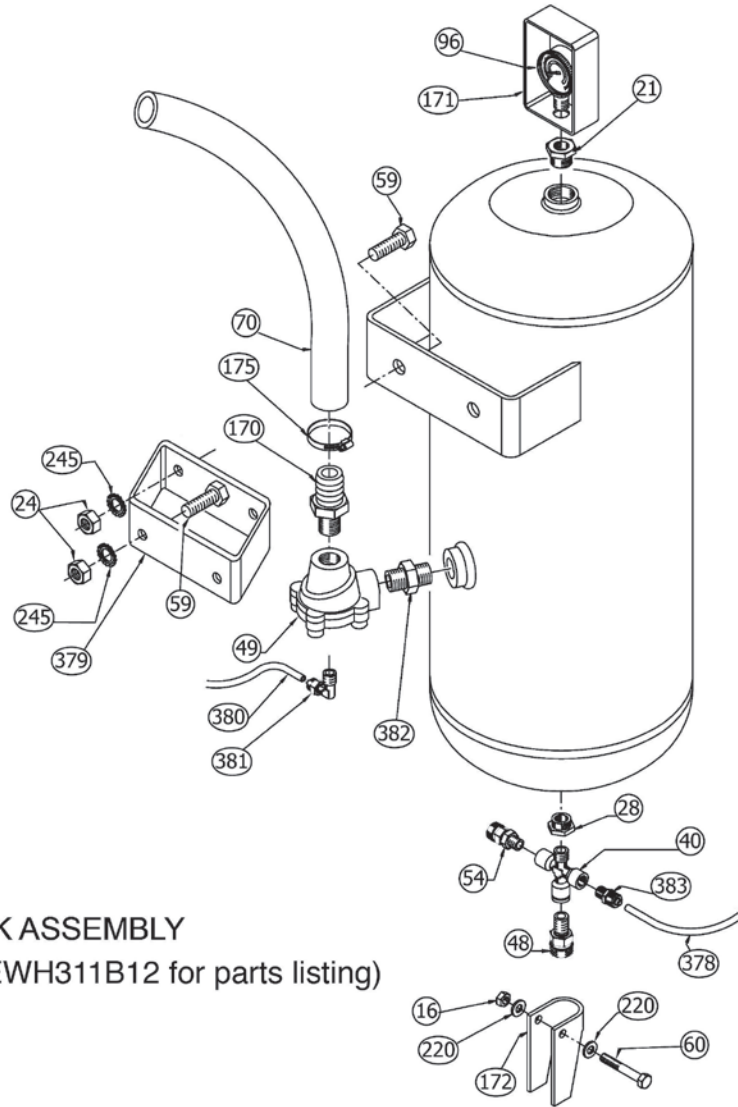

AIR TANK ASSEMBLY
 (Go to EEWH311B12 for parts listing)