

Snap-on SOEXR Ratcheting Box Wrench Series Reverse Lever Repair Kit

WARNING

Particles may fly while repairing this tool.
Wear safety goggles, user and bystanders.
Flying particles can cause injury.

Improper repair can cause broken tools.

- Read and follow instructions for proper repair.
- Do not immerse box end in fluids.
- Do not replace worn parts individually.
- Use all parts found in this kit.

Broken tools can cause injury.

Disassembly

1. Remove the screw retaining the reverse lever: remove lever, ball & spring.
2. Check the box end for excessive wear, cracks, burrs, peeling chrome & rust.
3. Wipe the area clean and dry completely before installing any replacement parts.
4. Check pawls & spring to be sure pawls are resting on the bottom of pawl pocket.
CAUTION: *Pawls & spring are not removable.*


Assembly

1. Box end interior must be free of all foreign materials to ensure proper operation.
2. Apply several drops of 50-weight oil on the pawls, spring & gear teeth.
CAUTION: *Do not fill entire area with lubricant or function could be affected.*
3. Place spring in lower hole, place ball on top of spring.
4. Place reverse lever in pawl pocket in the neutral position.
5. Insert screw into reverse lever and partially tighten
6. Move the reverse lever back and forth to engage pawls, tighten screw to torque spec.

Contents: Reverse Lever Screw Spring Ball Instruction Sheet	Tools required: QDRIVER4 or similar torque product T8 or T15 screwdriver bit
---	---

ZRKMSOER

ZRKMSOEXR

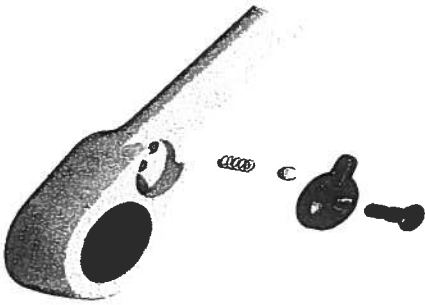

Nominal Size	Wrench	Repair Kit	Screw Torque (in.-lbs.)	Torx Driver
8mm	SOEXRM8	RKV1	5 +/- 1	T8
9mm	SOEXRM9	RKV2	5 +/- 1	T8
10mm	SOEXRM10	RKV3	5 +/- 1	T8
11mm	SOEXRM11	RKV3	5 +/- 1	T8
12mm	SOEXRM12	RKV4	5 +/- 1	T8
13mm	SOEXRM13	RKV5	5 +/- 1	T8
14mm	SOEXRM14	RKV6	5 +/- 1	T8
15mm	SOEXRM15	RKV7	5 +/- 1	T8
16mm	SOEXRM16	RKV8	11 +/- 2	T15
17mm	SOEXRM17	RKV9	11 +/- 2	T15
18mm	SOEXRM18	RKV10	11 +/- 2	T15
19mm	SOEXRM19	RKV11	11 +/- 2	T15
3/8"	SOEXR12	RKV3	5 +/- 1	T8
7/16"	SOEXR14	RKV3	5 +/- 1	T8
1/2"	SOEXR16	RKV5	5 +/- 1	T8
9/16"	SOEXR18	RKV6	5 +/- 1	T8
5/8"	SOEXR20	RKV8	11 +/- 2	T15
11/16"	SOEXR22	RKV9	11 +/- 2	T15
3/4"	SOEXR24	RKV11	11 +/- 2	T15